HOMEOWNER HOW-TO: TURNING OFF WATER TO OUTSIDE SPIGOTS AND CLOSING INSIDE BALL VALVES

When: Late November; after Irrigation Shutdown/Gutter Cleaning

Step 1

Close the outside water ball valves located along the copper ceiling pipes in your basement, one at the front and one at rear of the unit.

Look for the hanging chain that identifies these shutoff valves. They are located inside the basement nearest to the same location where the water line goes to the outside spigots.

Pull down the red or black handles, not the hanging chain, until they are perpendicular to the valve. In the Spring, move them parallel to turn on the outside water.

Inside Basement (Front & Rear)



Move handle perpendicular to pipe to close

Step 2

Disconnect any garden hoses that you have attached on the outside spigots (rear, deck, and front).

Leave outside spigots in the open position to allow any water to drain.

Outside Unit (Front & Rear)



Remove garden hoses; open spigot

If you have a problem locating, reaching, or turning the valves, please call Al Niski (508.303.6663) for assistance.